


ZONEC2

Zone Controller 2

Zone Controller 2 Overview

Advanced Network Device's (AND) devices are Power over Ethernet (PoE, PoE+) and require only an RJ-45 connector to connect to existing data networks. You can broadcast simultaneously to both phones and speakers. When you implement an AND zone controller you can connect to your existing amplifier, making your existing analog speakers IP enabled.

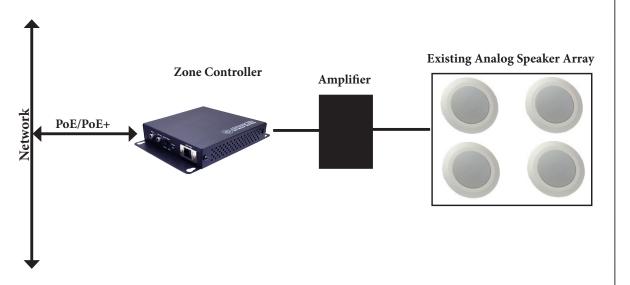

Terminal Connection Detail Side ∟ Input 0 ¬ ⊢ Input 1 ¬ ⊢ Spkr Out 7 F Mic in 7 6.000 - Output .040 1.250 8.000 Side Тор **Bottom** Side 8.000 1.250 1.250 8.000 6.000 -350 Line Ir -Ø.250 β Ø.375 4 PLACES D Output Mode Switch 6.000 Power LED 5.830 6.000 5.185 6.000 265 -1.000 1.000-7.000

Features

Built in Web Server:

- Configurable volume
- Device status
- · Field upgradable

Easy Installation:

- Only requires CAT 5 connection to network, up to 300 ft.
- Power over Ethernetthernet (no power cord or adapter required).
- Connect to external amplifier
- Provides a complete solution for larger areas with multiple speakers
- · Power indicator

Interfaces:

- Unbalanced line level audio in/out via RCA connectors
- Line Out power level is up to 2 Vpp
- 2 general purpose inputs
- 1 general purpose output with option to provide 12V DC power
- 8-ohm speaker output
- · Microphone input

Multicast:

 Full multicast and broadcast support. Send audio to individual devices, all devices or groups of devices.

Sound Masking:

• Generate configurable pink noise programmatically.

Options:

· Wall mount option included





