 


# V64

## Quick Installation Guide

## Packaging list

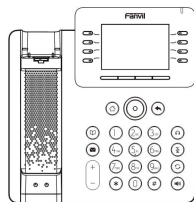

IP Phone



Handset



Handset Cord



Stand



 
Ethernet Cable



Power Adapter  
(Optional)



Quick Installation Guide



Wall Stand  
(Buy separately)

## Screen icon

	In hands-free mode		Call forward activated		New SMS		Dialed call(s)
	In headset mode		Disable do not disturb (Beige)		New VM messages		Internet connected
	In handset mode		Do not disturb activated (Red)		Voice quality level of call		Internet is disconnected
	Mute activated		SIP hotspot activated		Keypad locked		No IP address
	Silent mode		VLAN activated		Forward call(s)		Wireless network connected
	Call is on hold		VPN activated		Missed call(s)		Wireless network disconnected
	Auto-answering activated		Bluetooth device paired connection		Received call(s)		Wireless network failure

## Keys features



DSS Keys, It can be set as line key/function key/speed dial key, etc.



Soft keys



Message waiting indicator



Left and right navigation keys  
Up navigation key, Shortcut to call log  
Down navigation key, Shortcut to Status  
OK key, Shortcut to Menu



Home key, go back to Homepage



Return key, go back to the previous directory



Phonebook key



Voice message key



In idle mode or during ringing: increase or decrease ringer volume  
In communication: increase or decrease handset, headset or hands-free volume



Headset key, activate/deactivate headset



In idle mode: activate/deactivate silent mode  
In communication mode: mute/un-mute a call



Redial key, access to redial the last record

 


Hand-free key, activate/deactivate hands free


## Installation the device

Please follow the instructions in below picture to install the device.

### ● Bracket desktop installation

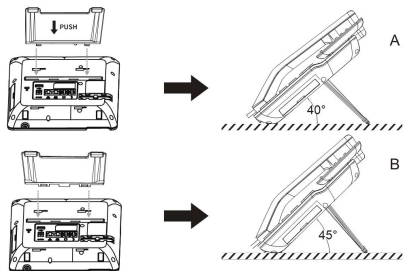


### ● Wall mounting (wall stand need buy separately)

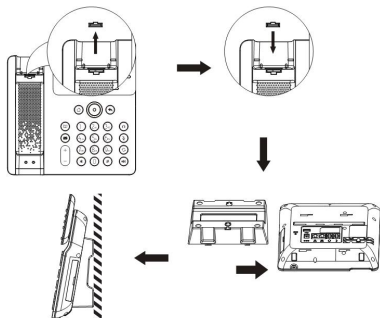 

## Connecting to the device

Please connect power adapter, network, PC, headset, and handset to the corresponding ports as described in below picture.

 - ① USB port: connect USB device (USB flash drive)
- ② Power port: connect the power adapter.
- ③ Network port: connecting local area network or internet.
- ④ PC port: the network port connect to the computer.
- ⑤ Headset port: connect headset.
- ⑥ Handset port: connect IP Phone handset..

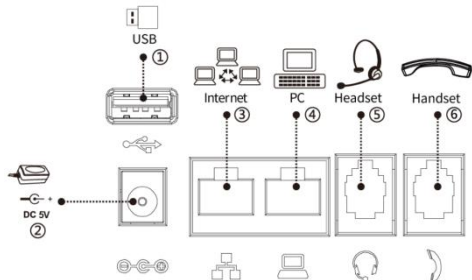

## Network connect

### Using Ethernet

1. The power on the device and connect the WAN port of the phone to the RJ45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable.
2. The default is DHCP mode.

### Using WiFi

1. The power on the device and make sure the phone is idle.
2. Press Menu > Basic > WLAN, Enabled the WiFi Feature.
3. Press scan to search for currently available wireless network.
4. Enter the available network and select the WiFi you want to connect.
5. Press connect soft key and enter the appropriate password to connect to the WiFi. The default is DHCP mode.

## Configuration

### Configuration via LCD menu of phone

1. Press Menu > Advanced (default password 123)
2. Select Network: To configure the Network Settings (IPv4/IPv6/IPv4&IPv6, DHCP/Static/PPPoE).
3. Select Accounts: To configure enable the account, fill the SIP server address, port, user name, password etc.
4. Save the configuration.

### Configuration via web

1. Get the IP address from the phone: Press down navigation key, or Menu > Status > IPv4 / IPv6.
2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment (The default username and password are both 'admin'.)
3. Configure: Select network/account etc, and fill the relevant content.
4. Save the configuration.

## Language setting

1. Press Menu key > Basic > Language.
2. Select the desired language and press OK soft key.


## Making a call

1. **Pre-dialing**: enter the phone number and pick up the handset.
2. **Direct dialing**: lift the handset and enter the phone number.
3. **Handsfree**: enter phone number and press or vice versa.
4. **Headset**: enter phone number and press or vice versa.
5. **Designated line**: press line key, enter phone number and press dial key.



## Accepting a call

1. **Using the handset**: pick up the handset.
2. **Using the headset**: press .
3. **Using the handsfree**: press .

## Redial

1. Press  key, redial a call number.

## Call Mute

1. Press  to Mute the microphone during the call.
2. Press  again to un-mute the conversation.

## Putting a call on hold

1. Press Hold soft key, caller is put on hold.
2. To retrieve the call press Resume soft key.

**Note:** with more than one active call, select desired call with the navigator key and use the corresponding soft key to hold or resume.

## Call transfer

### Attended transfer:

1. Press Xfer soft key during the active conversation, the call is put on hold.
2. Dial the second telephone number.
3. When the call is answered, then press Xfer soft key to complete the operation.

### Blind transfer:

1. Press Xfer soft key during the active conversation, the call will be on hold.
2. Then enter the 2nd telephone number and press Xfer soft key.

## Call forward

1. Press Menu > Features > Call Forward.
2. Select the line, the type of forward, enter the destination number and status, and press OK soft key.

## Call conference

1. Once in line with 1st caller, press Conf soft key, 1st caller is put on hold.
2. Then call the 2nd number.
3. After, 2nd call is established, press Conf soft key to set up the conference.


## Programmable keys

1. You can configure shortcuts for the programmable keys.
2. Press Menu > Basic > Keyboard, select among the configurable items, and select your desired type and value, press OK key.

## Do not disturb

1. Press DND soft key, and enable the device do not disturb mode.
2. Or press Menu > Features > DND, and select the Mode and Type, and press OK key.

## Voice mail

1. To access your voice mailbox, press  or Menu > Message > Voice Message, number of messages will be indicated if provided by your server or pbx.
2. Select the line and press Play to call.



## Bluetooth

1. Press Menu > Basic > Bluetooth.
2. Press OK soft key to enter the bluetooth open interface. After opening, press Scan soft key to display the list of bluetooth scanned. Select any device and press connect.

## WiFi




1. Press Menu > Basic > WLAN.
2. Press OK soft key to enter the WLAN open interface. After opening, press Scan soft key to display the list of Wi-Fi scanned.
3. Press Enter soft key to enter the available Network, select the wireless network, press the Connect soft key and enter the password to connect.

## Call list

1. Press up navigator key or Menu > CallLog > Local Call Logs
2. Scroll through the list using navigator key.
3. To dial an entry, press Dial soft key or pickup handset or press  or .

## Phonebook

### Access Phonebook:

1. Press  or Contact soft key or Menu > PhoneBook > Local Contacts.
2. Select All Contacts or other group.
3. To dial an entry, press Dial soft key or pickup handset or press  or .

### Add new entry:

1. Press Contact soft key, Press All Contacts or other group > Press Add.
2. Enter name and number and press OK soft key.

# Regulatory Compliance

## Federal Communication Commission (FCC) — USA

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received; including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: 3I11PNANV64. If requested, this number must be provided to the telephone company.

## Industry Canada Equipment Standard for Digital Equipment (ICES) — Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Innovation, Science and Economic Development (ISED) — Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
  - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
- (1) L'appareil ne doit pas produire de brouillage;
  - (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with IC multi-transmitter product procedures.

Cet appareil et son antenne (s) ne doit pas être co-localisés ou fonctionner en association avec une autre antenne ou transmetteur.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Le présent produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada.

Fanvil Technology Co., Ltd

Website: [www.fanvil.com](http://www.fanvil.com)

E-Mail: [sales@fanvil.com](mailto:sales@fanvil.com) [support@fanvil.com](mailto:support@fanvil.com)

Tel: +86-755-2640-2199 Fax: +86-755-2640-2618

Add: 10/F Block A, Dualshine Global Science Innovation Center, Honglang North 2nd Road, Bao'an District, Shenzhen, China