



# QUICK START

## POLY ATA 402



[poly.com/support/ata-402](https://poly.com/support/ata-402)

[poly.com/support/ata-402](https://poly.com/support/ata-402)

HP EU  
HP Deutschland, GmbH, HQ-Technical Regulations  
Schickardstr. 32, 71025 Boeblingen, Germany

HP Inc UK Ltd.  
Regulatory Enquiries, Earley West,  
300 Thames Valley Park Drive,  
Reading, RG6 1PT, England



Recyclable where facilities exist


© 2023 Poly. All trademarks are the property of their respective owners.



1725-88162-001A 06/23

RMN: Poly ATA 402

### CONTENTS

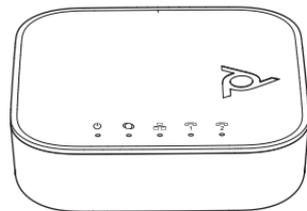

Poly ATA 402



Power Adapter



Ethernet Network Cable

### YOU WILL NEED

- Touch-tone phone
- Active Internet connection
- Access to the Internet via an Ethernet port on your router or modem
- (Optional) Internet phone service subscription
- (Optional) To wall-mount the ATA 402 device, two 5 mm (3/16 in.) screws and anchors (not supplied)

### LED



Off: No Power  
 Solid green: Powered on and working  
 Flashing green: Searching for a DHCP IP address  
 Flashing orange: Upgrading (Do not unplug power.)  
 Solid red: Not operational



Flashing green (fast blinking): Data activity on the LAN Ethernet port



Flashing green (fast blinking): Data activity on the PC Ethernet port







Off: Port service not available  
 Solid green: Phone ready (standby)  
 Flashing green: Phone in use

### ATA system web interface

1. From a phone attached to the ATA device, dial \*\*\* to access the ATA config attendant.
2. Choose 1 to hear the IP address of the ATA device.
3. Enter the ATA device IP address in a local PC web browser.
4. When prompted, enter **admin** for the user name and **admin** for the password.

### CABLING

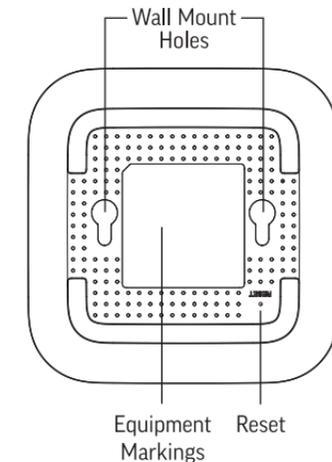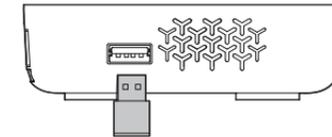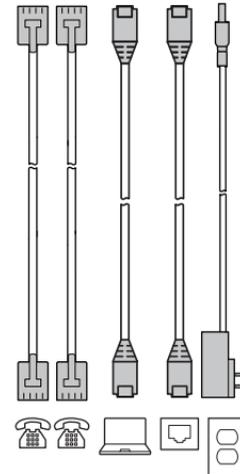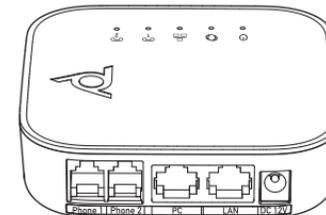

Equipment Reset Markings