

Video Door Phone Quick Installation Guide



i60

Package Contents



Physical Specification

Cable Outlet


Cover

Model	Device Size
i60	50×130×30mm (L*H*W)

1) Panel

بلتها

Template

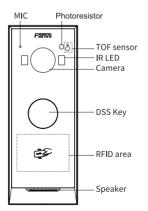


Connector

Screw

2) Interface Description

Open the rear case of the device, there is a row of terminal blocks for connecting the power supply, electric lock control, etc. The connection is as follows:

Wire

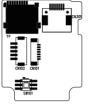

Description

Block	Name	Color	Description		
CN101	DOORA	Red	Two sets of short-circuit		
	GND	Black	input detection interfaces: for connecting switches, infrared probes, door magnets, vibration sensors and other input devices		
	DOORB	Brown			
	GND	Black			
	WG_D1	Yellow			
	WG_D0	White	Wiegand interface		
	GND	Black			
CN102	12V+	Red	Power interface: 12V/1A input up positive, down grounded		
	GND	Black			
	NC	Yellow	Short-circuit output contro		
	СОМ	Green	interface: used to control		
	NO	White	electric locks, alarms, etc.		
CN301	Ethernet	/	Ethernet interface: standard RJ45 interface, 10/100M adaptive, it is recommended to use Cat5, Cat5e or Cat6		
SW101	Tamper Switch	/	Normally in the pressed state		
TF	TF Card Slot	/	Insert TF card here		

3) Wiring Instructions

NO: Normally Open Contact; COM: Common Contact; NC: Normally Close Contact.

Mode	Electric-lock Mode			
Passive	No electricity when open	Electrify when open	Connections	
√	√		Bedric Joh die Access control (entered prover supply) S I S O NC CON NO Tower Spirity Tower	
√		√	Facility for drive (centural govern caregly)	
√	√		Access control power Supply Control Prover Supply Control Prove Supply Control Prover Supply Control Prover Supply Control Prove Supply Control P	

❸ Installation Instructions

1) Notice

- Do not install the device in places with condensation, high temperature, grease, or dust.
- Install the unit at a suitable visual height, with a recommended height of 120~140cm. If it is installed indoors, please maintain a distance of at least 2 meters from light sources and at least 3 meters from doors and windows to avoid direct sunlight.
- Avoid violent vibration, collision and impact, which may cause damage to the internal precision components and the shell.

2) Installation Diagram

Step 1: Installation preparation

A. Check the following contents:

- KA4*25 screw x4
- φ6*30mm screw anchor x4
- KM3*5 screw x2
- KM2*6 screw x6
- B. Recommended Tools

You need the following tools to perform the removal and installation procedures:

- Ph2 or Ph3 and Ph5 Phillips screwdriver, hammer, RJ45 crimping pliers
- Wall drilling impact drill, 8mm impact drill x1

Step 2: Drill and Install wall bracket



A. Use the mounting template to mark the exact position of the mounting holes on the wall.

- B. Before marking the holes, use a spirit level or other method to verify that the template is horizontally aligned, this will ensure that the intercom unit will be mounted straight.
- C. Choose the appropriate drill bit and drill the holes at the marked positions, ensure the depth of the holes are 2CM.
- D. Insert the wall anchors into the holes, gently tap the anchors into the holes with hammer until they are flush with the wall surface.

E. Position the mounting bracket over the drilled holes, ensure the holes on the bracket align with the anchors.

F. Use the screws to attach the bracket to the wall, tighten the screws with a screwdriver or drill with a screwdriver bit.

www.fanvil.com 1 2 3

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 1s of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Consult the dealer or an experienced radio/TV technician for help Changes or modifications not
expressly approved by the party responsible for compliance could void the user's authority to
operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Step 3: Connect wiring

A. Connect the CAT5e cable, Power cable, Maglock cables into the slot, tighten the waterproof cover with the KM2*6 screws.

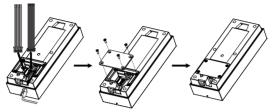

B. If the cable outlet is too small, use diagonal pliers to cut off the cable outlet.

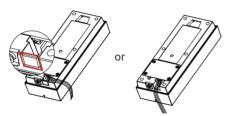

C. Place the unit from bottom to top, position the unit on the mounting bracket, use the screw to tight the unit on the bottom of bracket.



4 Searching Door Phone

Here are two methods as shown below to search the device.

Method 1:

Open the IP scanning tool (Device Manager), click on the scan button to obtain the IP address of door phone devices within the local network.



Method 2:

To switch the system to network mode and have it announce the IP address by voice, follow these steps: A. Press and hold the DSS key for 3 seconds (after 30 seconds of powering on):

- Wait for 30 seconds after powering on the device.
 Press and hold the DSS key for 3 seconds.
- Ensure you maintain a consistent press for the full duration.
- After the speaker emits a prompt tone, quickly press the DSS key once. The prompt tone will stop, and the device will automatically announce its IP address by voice.

B. Procedure to switch to IP address acquisition mode:

- Press and hold the DSS key for 3 seconds until the speaker emits a rapid beep.
- Quickly press the DSS key three times within 5 seconds.
- After successfully switching to network mode, the system will automatically announce the IP address by voice.

6 IP Door Phone Setting

Step 1: Log in the door phone

Input IP address (e.g. http://192.168.1.128) into address bar of PC's web browser. The default user name and password are both admin.



Step 2: Add the SIP account

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.
Select "Activate", and then click Apply to save this setting.



Step 3: Door Phone Setting

On the web page "EGS Setting", you can configure parameters for access control, manage personnel, and manage cards.

	Feature Relay	Card Pass	sword Time Profile	le Logs
> System				
) Network	Basic Settings Relay1 Mode:	Monostable ▼	Relay1 Open Duration	n 5
> Line	Relay2 Mode: Relay2 Follow Mode	Monostable v Independence v	Relay2 Open Duration Asynchronization Dela	lay Time 1
> Intercom settings	RFID Format Wiegand Mode Wiegand Parity Check	Input v	Wiegand Format Wiegand Type Wiegand Password Ou	SH100 V
> Call List	Relay Open Mode Relay Log Export Enable	☑ Card Reader ☑ Password		Mode Normal V
> Function Key	Relay Log Server Addr Relay Log Server Port	0.0.0.0	Relay Log Info	<8>dcor\$indect
> Security			Apply	
> Device Log				
> Security Settings				
> EGS Setting				
> Platform Access				

EMail: sales@fanvil.com support@fanvil.com
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618
Add: 10/F Block A, Dualshine Global Science Innovation Center,
Honglang North 2nd Road, Bao'an District, Shenzhen, China

Fanvil Technology Co., Ltd

Website: www.fanvil.com